


Rubex

Parts and Instructions

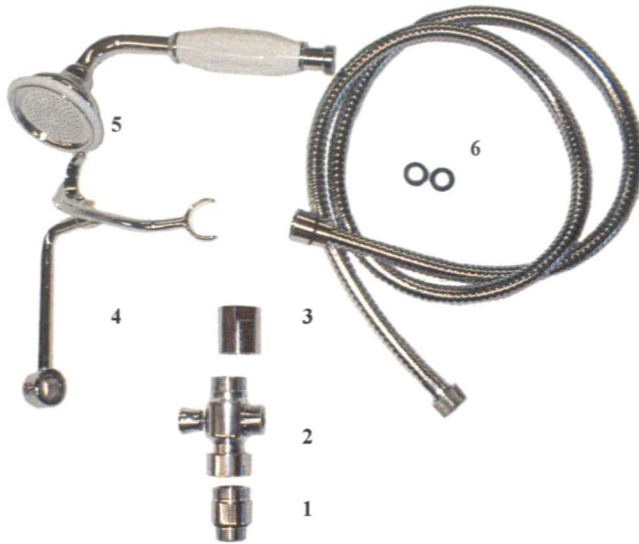

2810DK SERIES

#	Part No.	Description
---	----------	-------------

1	110D-800NU	Diverter Adapter Nut
2	110D	Diverter
3	2200X-540	Riser Adapter Nut
4	190CR	Cradle
5	HD201	Hand Shower
6	91300	Double Spiral Metal Hose 150cm

Note: -Above Part Numbers for Chrome Finish
-Please Note Faucet Finish When Ordering Parts

Care and Maintenance

Minimum maintenance is required to maintain product finish. With proper maintenance your **Rubex** faucet will continually look like new. Special care should be taken when cleaning your Faucet and the following suggestions should help extend your Faucet life.

A) Cleaning should be done regularly using a soft cotton cloth and warm water; then towel dry.

B) Do not use cleaners that contain abrasives or harsh chemicals; care should be taken in selecting cleaning supplies. Many cleaner contain detergents, ammonia, or other corrosive solvents that could damage your faucet finish.

C) Occasionally clean with a non-abrasive wax polish.

Warranty

MiBATHS warrants the original purchase for a Limited Life Time Warranty from original date of purchase that the product will be free of any manufacturing defects. Product will be replaced at no charge provided it has been installed in accordance to **MiBATHS Installation Instructions**, used as recommend and not damage due to misuse, abuse, faulty maintenance, accident or other damage. **MiBATHS** is not responsible for replacement labor costs, or shipping charges, or damage incurred during installation, removal, repair, or replacement of any **MiBATHS** product.

My Italian Bath & Shower Inc.

1330 Appling Street, Chattanooga, TN 37406
Email: mibaths@comcast.net Website: www.mibaths.com
Toll Free: 1-866-622-9577 Fax: 1-888-698-8755

Rubex

Mounting Instructions

1. Turn off water supply to the Faucet for Diverter kit installation.
2. Add Adaptor nut (1) to the top of your Faucet. It is recommended to use Silicone or Thread lock to prevent leaking.
3. Add Diverter (2) to Adaptor nut (1) then add Adaptor nut (3) to the top of Diverter (2).
4. Slide on Cradle (4) to the bottom Riser tube and connect to Adapter nut (3).
5. Screw Hose (6) on to Diverter (2) and add Hand shower (5) to hose to complete assembly.